

BUCKET R DOLLY

R2MANUFACTURING.COM

PO BOX 14,
ALDEN NY,
14004


240-230-7263



1
Install the black front
mount on top of blade
dolly



2
Install the following:
2-1" X 1/4-20 bolts
2-washers

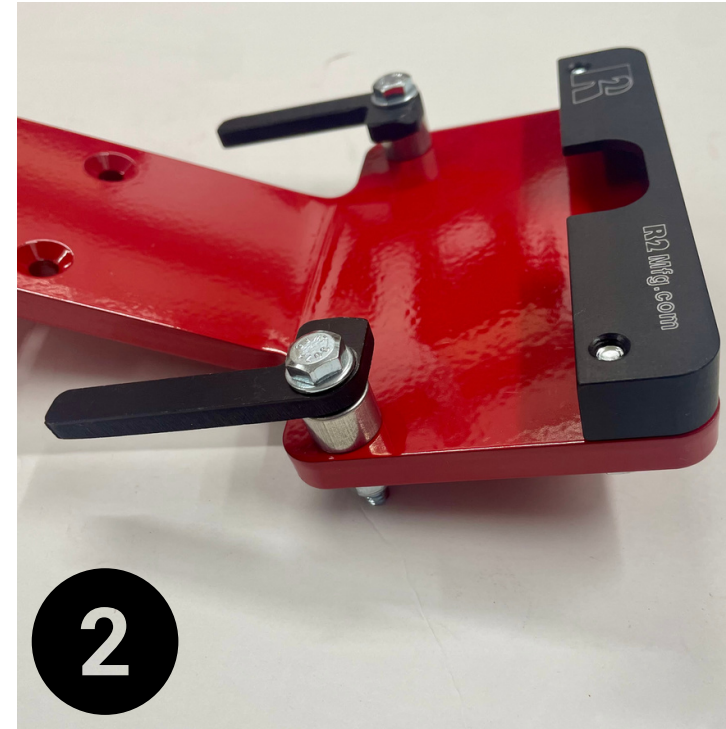

3
Mount 2 rotation clamps



4
Install the following:
2-1 3/4"-1/4-20 bolts
2-spacer bushings
4-washers
2-1/4-20 nylon lock nuts
ONLY NEEDS TO BE SNUG TIGHT



5
Install 2 casters using:
8-1" 1/4-20 stainless steel screws
8-washers
8-1/4-20 nylon lock nuts



6
Install 1"- 1/4-20 bolt into the threads
from the top of the dolly plate

7
Install dolly onto Edge Tamer/Bolt on
Tamer, by placing the dolly over the
front of the Tamer and rotate clamps.
Adjust bolt so that it just touches the
bottom of the bucket.



8
Install the standard nut from the bottom of the dolly
plate and tighten

9
Place nylon cap over the top of the bolt head



NOTE: REPEAT PROCESS TO BUILD SECOND DOLLY